

**WARRANTY
REGISTRATION:**
register online today for a
chance to win a FREE Tripp Lite
product—www.tripplite.com/warranty



Owner's Manual

SMART1200LCD, SMART1500LCD & OMNI1500LCD



Not suitable for mobile applications.

English

1

Español

5

Français

9

Important Safety Instructions



SAVE THESE INSTRUCTIONS

This manual contains instructions and warnings that should be followed during the installation, operation and storage of all Tripp Lite UPS Systems. Failure to heed these warnings may affect your warranty.

UPS Location Warnings

- The UPS is designed for indoor use only in a controlled environment, away from excess moisture, heat/cold, conductive contaminants, dust or direct sunlight.
- Leave adequate space around all sides of the UPS for proper ventilation.
- **Do not mount unit with its front or rear panel facing down (at any angle). Mounting in this manner will seriously inhibit the unit's internal cooling, eventually causing product damage not covered under warranty.**

UPS Connection Warnings

- Connect your UPS directly to a properly grounded AC power outlet. Do not plug the UPS into itself; this will damage the UPS.
- Do not modify the UPS's plug, and do not use an adapter that would eliminate the UPS's ground connection.
- Do not use extension cords to connect the UPS to an AC outlet.
- If the UPS receives power from a motor-powered AC generator, the generator must provide clean, filtered, computer-grade output.
- The UPS contains its own energy source (battery). The output terminals may be live even when the UPS is not connected to an AC supply.

Equipment Connection Warnings

- Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended. Do not use this equipment in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide.
- Do not connect surge suppressors or extension cords to the output of your UPS. This might damage the UPS and may affect the surge suppressor and UPS warranties.

Battery Warnings

- Your UPS does not require routine maintenance. Do not open your UPS for any reason. There are no user-serviceable parts inside.
- Batteries can present a risk of electrical shock and burn from high short-circuit current. Observe proper precautions. Do not dispose of the batteries in a fire. Do not open the UPS or batteries. Do not short or bridge the battery terminals with any object. Unplug and turn off the UPS before performing battery replacement. Use tools with insulated handles. There are no user-serviceable parts inside the UPS. Battery replacement should be performed only by authorized service personnel using the same number and type of batteries (Sealed Lead-Acid). The batteries are recyclable. Refer to your local codes for disposal requirements or visit www.tripplite.com/UPSbatteryrecycling for recycling information. Tripp Lite offers a complete line of UPS System Replacement Battery Cartridges (R.B.C.). Visit Tripp Lite on the Web at www.tripplite.com/support/battery/index.cfm to locate the specific replacement battery for your UPS.
- Do not attempt to add an external battery pack to the UPS.



1111 W. 35th Street • Chicago, IL 60609 USA
www.tripplite.com/support

Copyright © 2010 Tripp Lite. All rights reserved. All trademarks are the property of their respective owners.

Quick Installation

STEP 1: To install the UPS in a 4-post rack, attach the included mounting hardware to the UPS as shown in diagram **A**. To mount the UPS in a 2-post rack, attach the included hardware to the UPS as shown in diagram **B**. Then, using an assistant if necessary, lift the UPS and attach it to a standard rack or rack enclosure with user-supplied hardware. **Caution: If the UPS is installed in a rack, allow at least 0.75 in. (2 cm) clearance above and below the unit. If the UPS is placed flat on a surface, do NOT stack any other object directly on top of the unit.** The UPS will stand in a tower position without the aid of the included hardware. However, for added stability Tripp Lite recommends that the included hardware be attached as shown in diagram **C**. The UPS and included hardware are designed for common rack and rack enclosure types and may not be appropriate for all applications.

STEP 2: Plug the UPS into an outlet.

After plugging the UPS into a wall outlet, push the ON/OFF button for one second to turn the UPS on (see Basic Operation section). Please Note! The UPS will not turn on automatically in the presence of live utility power.

STEP 3: Plug your equipment into the UPS.




** Your UPS is designed to support electronic equipment only. You will overload the UPS if the total VA ratings for all the equipment you connect to the outlets exceeds the UPS's Output Capacity. To find your equipment's VA ratings, look on their nameplates. If the equipment is listed in amps, multiply the number of amps by 120 to determine VA. (Example: 1 amp \times 120 = 120 VA). If you are unsure if you have overloaded the outlets, run a self-test (see "MUTE/TEST" Button description).*

STEP 4: Optional Installation.

All models include USB and RS-232 communication ports as well as Tel/DSL/network surge protection jacks. These connections are optional; the UPS will work properly without these connections. See the connector's description in the Basic Operation section for connection instructions.

If the LINE POWER indicator light (LCD screen on Digital models) does not illuminate when the UPS is turned ON, try the following:

1. Make sure that the UPS is plugged into a live AC outlet.
2. If your UPS has a sliding ON/OFF switch, place it back in the OFF position, wait several seconds, then place it in the ON position again.
3. If your UPS had an ON/OFF button, you must press it for at least one second to start the UPS. (A beep should sound when the UPS starts.)
4. If the UPS still does not start, contact Tripp Lite Tech Support for assistance.

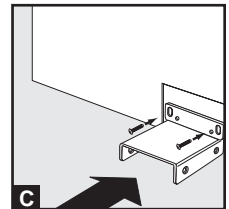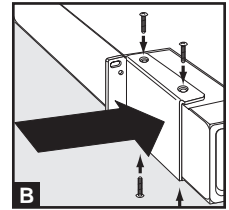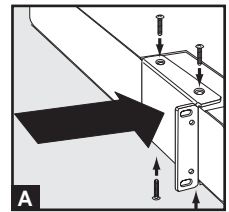

Basic Operation (Front Panel)

1 "ON/OFF" Button

- **To turn the UPS on:** Press and hold the ON/OFF Button for one second.* If utility power is absent, pressing the Button will "cold-start" the UPS, i.e. turn it on and supply power from its battery.**
- **To turn the UPS off:** Press and hold the ON/OFF Button for one second.* The UPS will be turned completely off (deactivated).

** The alarm will beep once briefly after one second has passed. ** Providing runtime proportionate to the UPS battery's level of charge.*


Note: UPS system will function properly upon initial startup; however, maximum runtime for the unit's battery will only be accessible after it has been charged for 24 hours.



ON/OFF Button

2 "MUTE/TEST" Button

- **To Silence (or "Mute") UPS Alarms:** briefly press and release the MUTE/TEST button. Note: continuous alarms (warning you to immediately shut down connected equipment) cannot be silenced.
- **To Run a Self-Test:** with your UPS plugged in and turned on, press and hold the MUTE/TEST button for two seconds. Continue holding the button until the alarm beeps several times and the UPS performs a self-test. See "Results of a Self-Test" below. Note: you can leave connected equipment on during a self-test.

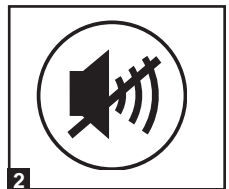

MUTE/TEST Button

CAUTION! Do not unplug your UPS to test its battery. This will remove safe electrical grounding and may introduce a damaging surge into your network connections.

Results of a Self-Test: The test will last approximately 10 seconds as the UPS switches to battery to test its load capacity. All LCD Display icons will be illuminated and the UPS alarm will sound.

- If the "FAULT" icon remains lit and the alarm continues to sound after the test, the outlets are overloaded. To clear the overload, unplug some of your equipment from the outlets and run the self-test repeatedly until the "FAULT" icon is no longer lit and the alarm is no longer sounding.

CAUTION! Any overload that is not corrected by the user immediately following a self-test may cause the UPS to shut down and cease supplying output power in the event of a blackout or brownout.

- If the "REPLACE" icon remains lit and the alarm continues to sound after the test, the UPS batteries need to be recharged or replaced. Allow the UPS to recharge continuously for 12 hours, and repeat the self-test. If the icon continues to illuminate after repeated self tests, contact Tripp Lite for service. Battery replacement should only be performed by qualified service personnel. If the UPS requires battery replacement, Tripp Lite offers a complete line of replacement batteries at www.tripplite.com.

3 LCD Display

The LCD Display indicates a variety of UPS operational conditions. All descriptions apply when the UPS is plugged into an AC outlet and turned on. The LCD Display can be rotated for easy viewing, regardless of whether the UPS is in a horizontal or vertical ("tower") position. To rotate the display, insert a small tool in the slots on the sides of the display to pop it out of the UPS housing; rotate the display, and snap it back into the UPS housing.

3a "Input Voltage" Meter: This meter measures, in real time, the AC voltage that the UPS system is receiving from the utility wall outlet. Although the meter may occasionally display input voltages which stray (due to poor quality utility service) outside the range of standard computer tolerance, rest assured that the UPS is designed (through the use of automatic voltage regulation) to continuously supply connected equipment with stable, computer-grade output voltage. In the event of a blackout (power loss), severe brownout (low power) or overvoltage (high power), the UPS will rely on its internal battery to supply computer-grade output voltage. The Input Voltage Meter can be used as a diagnostic tool to identify poor quality input power. By plugging the UPS into different outlets within a facility, you can identify individual circuits that are consistently providing low power, which can be caused by the combined equipment load demanding more power than the circuit is designed to supply. If all circuits within a facility consistently provide low power, the facility may be served by inadequate utility service or may be in an industrial or commercial area with an overburdened power grid.

3b "BATTERY CAPACITY" Meter: This meter displays the approximate charge level (in 20% increments) of the UPS's internal battery. During a blackout or severe brownout, the UPS will switch to battery power, the "ON BAT" icon will be illuminated, and the charge level will deplete.


3c "AVR" (Automatic Voltage Regulation) Icon: This icon will illuminate whenever your UPS is automatically correcting low AC line voltage without depleting battery power. This is a normal, automatic operation of your UPS, and no action is required on your part.

3d "REPLACE" (Battery Recharge/Replace) Icon: This icon will illuminate and an alarm will sound after a self-test to indicate the UPS battery needs to be recharged or replaced. Allow the UPS to recharge continuously for 12 hours, and repeat the self-test. If the icon continues to illuminate, contact Tripp Lite for service. Battery replacement should only be performed by qualified service personnel. If the UPS requires battery replacement, Tripp Lite offers a complete line of replacement batteries at www.tripplite.com.

3e "ON BAT" (On Battery) Icon: During a severe brownout or blackout, this icon illuminates and an alarm sounds (4 short beeps followed by a pause) to indicate the UPS is operating from its internal batteries. Monitor the "Battery Capacity" Meter to determine the approximate battery charge level available to support equipment. During a prolonged brownout or blackout, the alarm will sound continuously (and the "BATTERY CAPACITY" Meter will show one 20% capacity segment shaded) to indicate the UPS's batteries are nearly out of power; you should save files and shut down your equipment immediately.


3f "FAULT" Icon: This icon will illuminate and an alarm will sound after a self-test to indicate the outlets are overloaded. To clear the overload, unplug some of your equipment from the outlets and run the self-test repeatedly until the icon is no longer illuminated and the alarm is no longer sounding.

39 LCD Dimmer: Adjusts the brightness of the LCD Status Screen.

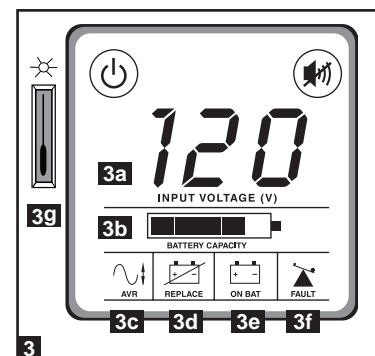


LCD Display


Basic Operation (Rear Panel)

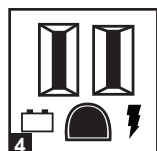


4 Battery Backup Protected/Surge Protected Outlets

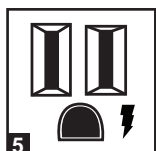


5 Surge-Only Protected Outlets (Select models only)

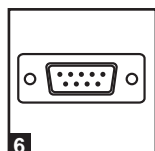


6 RS-232 Port (Select models only)

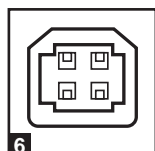


6 USB Port

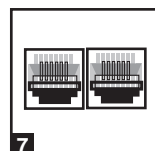

7 Tel/DSL/Network Jacks

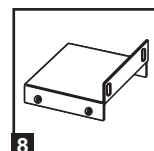

8 Removable Mounting Hardware

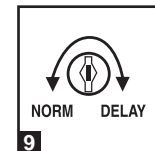

9 Power Sensitivity Dial

4 Battery Backup Protected/Surge Protected Outlets: Provide connected equipment with AC line power (backed by surge protection and line noise filtering) during normal operation. Automatic voltage regulation continually corrects brownout (low voltage) and high voltage conditions without using battery power. Provide battery power during blackouts and severe brownout or severe high voltage conditions. **DO NOT PLUG LASER PRINTERS INTO ANY OF THESE OUTLETS.**

5 Surge-Only Protected Outlets: Provide surge and line noise protection, but NOT battery backup. Plug equipment that does not require battery backup during a utility power failure (such as printers, scanners or fax machines) into these outlets.

6 USB and RS-232 Communication Ports: These ports can connect your UPS to any computer for automatic file saves and unattended shutdown in the event of a power failure. Use with Tripp Lite's PowerAlert Software (available as a FREE download at www.tripplite.com) and appropriate USB or DB9 cable. A USB or DB9 cable may be included with your UPS. If the appropriate cable did not come with your UPS, any user-supplied DB9 pass-through or USB cable may then be used to connect your UPS to your computer. Note: This connection is optional. The UPS will work properly without this connection. Also Note: This UPS System provides basic communication compatibility with most integrated Windows®, Macintosh® and Linux® power management applications.

7 Tel/DSL/Network Line Surge Protection Jacks: Your UPS has jacks that protect against surges on a single phone, fax, modem or Ethernet network line. Using appropriate telephone or network cords connect your wall jack to the UPS jack marked "IN." Connect your equipment to the UPS jack marked "OUT." Make sure the equipment you connect to the UPS's jacks is also protected against surges on the AC line. Connecting your equipment to these jacks is optional. Your UPS will work properly without this connection. Not compatible with PoE (Power Over Ethernet) applications.

8 Removable Mounting Hardware: Adapts the UPS to either tower or rackmount (2U) applications.

- 9 Power Sensitivity Dial:** This dial is normally set fully counterclockwise, which enables the UPS to protect against waveform distortions in its AC input. When such distortion occurs, the UPS will normally switch to providing PWM sinewave power from its battery reserves for as long as the distortion is present. In some areas with poor utility power or where the UPS's input power comes from a backup generator, frequent brownouts and/or chronic waveform distortion could cause the UPS to switch to battery too often, draining its battery reserves. You may be able to reduce how often your UPS switches to battery due to waveform distortion or brownouts by experimenting with different settings for this dial. As the dial is turned clockwise, the UPS becomes more tolerant of variations in its input power's AC waveform. NOTE: The further the dial is adjusted clockwise, the greater the degree of waveform distortion the UPS will allow to pass to connected equipment. When experimenting with different settings for this dial, operate connected equipment in a safe test mode so that the effect on the equipment of any waveform distortions in the UPS's output can be evaluated without disrupting critical operations. The experiment should last long enough to assure that all expected line conditions are encountered.

Battery Replacement: Under normal conditions, the original battery in your UPS will last several years. Battery replacement should be performed only by qualified service personnel. Refer to "Battery Warnings" in the Safety section. Should your UPS require battery replacement, visit Tripp Lite on the Web at www.tripplite.com/support/battery/index.cfm to locate the specific replacement battery for your UPS.

Storage and Service

Storage

To avoid battery drain, all connected equipment should be turned off and disconnected from the UPS. Press and hold the ON/OFF button for one second. Your UPS will be completely turned off (deactivated), and will be ready for storage. If you plan on storing your UPS for an extended period, fully recharge the UPS batteries every three months. Plug the UPS into a live AC outlet, turn it on by pressing and holding the ON/OFF button for one second, and allow the batteries to recharge for 4 to 6 hours. If you leave your UPS batteries discharged for a long period of time, they will suffer a permanent loss of capacity.

Service

A variety of Extended Warranty and On-Site Service Programs are available from Tripp Lite. For more information on service, visit www.tripplite.com/support. Before returning your product for service, follow these steps:

1. Review the installation and operation procedures in this manual to insure that the service problem does not originate from a misreading of the instructions.
2. If the problem continues, do not contact or return the product to the dealer. Instead, visit www.tripplite.com/support.
3. If the problem requires service, visit www.tripplite.com/support and click the Product Returns link. From here you can request a Returned Material Authorization (RMA) number, which is required for service. This simple on-line form will ask for your unit's model and serial numbers, along with other general purchaser information. The RMA number, along with shipping instructions will be emailed to you. Any damages (direct, indirect, special or consequential) to the product incurred during shipment to Tripp Lite or an authorized Tripp Lite service center is not covered under warranty. Products shipped to Tripp Lite or an authorized Tripp Lite service center must have transportation charges prepaid. Mark the RMA number on the outside of the package. If the product is within its warranty period, enclose a copy of your sales receipt. Return the product for service using an insured carrier to the address given to you when you request the RMA.

Warranty Registration

Visit www.tripplite.com/warranty today to register the warranty for your new Tripp Lite product. You'll be automatically entered into a drawing for a chance to win a FREE Tripp Lite product! *

* No purchase necessary. Void where prohibited. Some restrictions apply. See website for details.

FCC Part 68 Notice (United States Only)

If your Modem/Fax Protection causes harm to the telephone network, the telephone company may temporarily discontinue your service. If possible, they will notify you in advance. If advance notice isn't practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper operation of your equipment. If it does, you will be given advance notice to give you an opportunity to maintain uninterrupted service. If you experience trouble with this equipment's Modem/Fax Protection, please call Tripp Lite Technical Support at (773) 869-1234 for repair/warranty information. The telephone company may ask you to disconnect this equipment from the network until the problem has been corrected or you are sure the equipment is not malfunctioning. There are no repairs that can be made by the customer to the Modem/Fax Protection. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. (Contact your state public utility commission or corporation commission for information.)

FCC Radio/TV Interference Notice (U.S. only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference using one or more of the following measures: reorient or relocate the receiving antenna; increase the separation between the equipment and the receiver; connect the equipment into an outlet on a circuit different from that which the receiver is connected; consult the dealer or an experienced radio/television technician for help. The user must use shielded cables and connectors with this product. Any changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following 2 conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Equipment Attachment Limitations (models with the Industry Canada label in Canada only)

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets the telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements Document(s). The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that the compliance with the above conditions might not prevent degradation of service in some situations. Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas. Caution: Users should not attempt to make connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

Note on Labeling

Two symbols are used on the label.

V~ : AC Voltage

V== : DC Voltage

Regulatory Compliance Identification Numbers

For the purpose of regulatory compliance certifications and identification, your Tripp Lite product has been assigned a unique series number. The series number can be found on the product nameplate label, along with all required approval markings and information. When requesting compliance information for this product, always refer to the series number. The series number should not be confused with the marking name or model number of the product.

Tripp Lite follows a policy of continuous improvement. Product specifications are subject to change without notice.



1111 W. 35th Street • Chicago, IL 60609 USA
www.tripplite.com/support